



# Changing the IP address with the “EthUSBConfigure.exe” application.


1. Connect the USB cable and power on the PMAC.
2. Launch the application: “EthUSBConfigure.exe”.

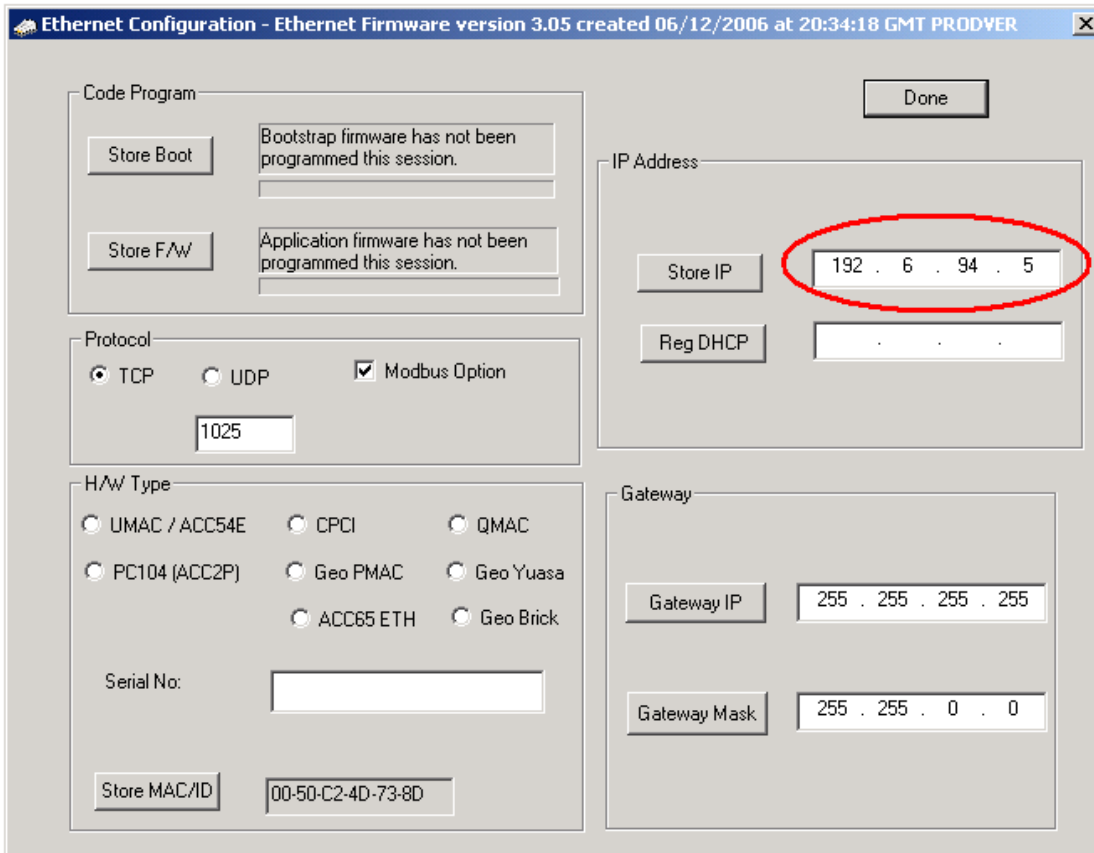


3. Enter the new IP address in the box shown above.
4. Click on the “StoreIP” button – the following dialog will appear – click “Yes”.

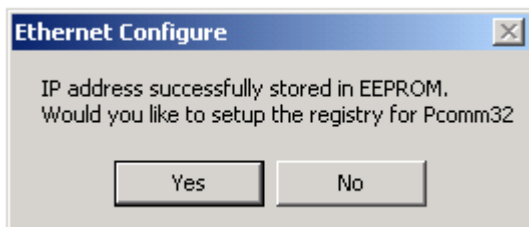

5. The next dialog will appear – if this is the only instance of an IP address leave at zero. If you have multiple instances of IP addresses (multiple PMAC EtherNet cards) enter the instance in the box and click “OK”.

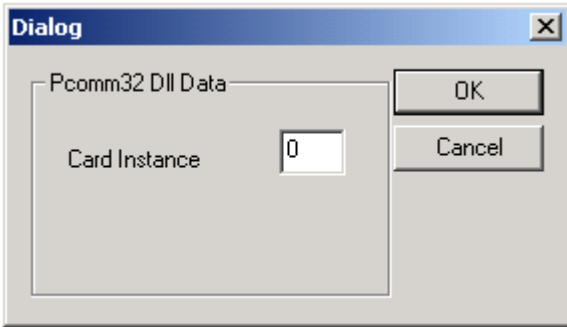

6. The following dialog will appear click “OK”.

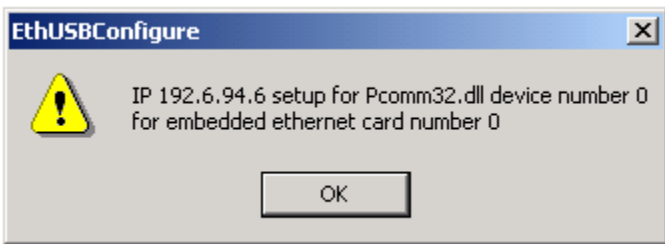

7. Click the “Done” button. This will take effect on the next PMAC power cycle. You must now change the address in the “PMAC Devices” window of your PMAC application.

