



NPort 5400 Series Quick Installation Guide

Fourth Edition, January 2007

1. Overview

Welcome to Moxa NPort 5400, a 4 port communication device that allows you to control RS-232 (for NPort 5410), RS-422/485 (for NPort 5430/5430I) or RS-232/422/485 (for NPort 5450/5450I) serial devices over a TCP/IP based Ethernet.

NPort 5400 Series is a MOXA Green Product. Moxa's Green Products satisfy the RoHS directive of the European Parliament, and accordingly, do not contain cadmium and cadmium compounds, hexavalent chromium compounds, lead and lead compounds, mercury and mercury compounds, PBBs (polybrominated biphenyls), or PBDEs (polybrominated diphenyl ethers).

2. Package Checklist

Before installing NPort 5400, verify that the package contains the following items:

- 1 NPort 5400 4-Port Serial Device Server
- NPort Document & Software CD
- NPort 5400 Series Quick Installation Guide
- Product Warranty

Optional Accessories


DK-35A For 35 mm DIN-Rail; includes 4 screws

Notify your sales representative if any of the above items is missing or damaged.


3. Hardware Introduction

As shown in the following figures, NPort 5410 has 4 Male DB9 ports, for the RS-232 interface, NPort 5430/5430I has 4 5-pin terminal blocks, for the RS-422/485 interface, and NPort 5450/5450I has 4 Male DB9 ports, for the RS-232/422/485 interface.

NPort 5410/5450/5450I

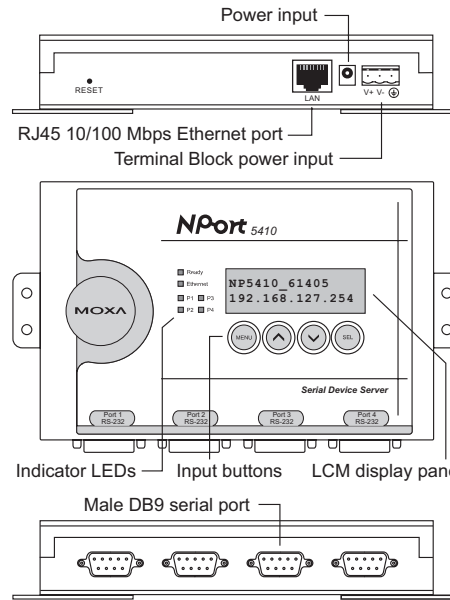

NPort 5430/5430I

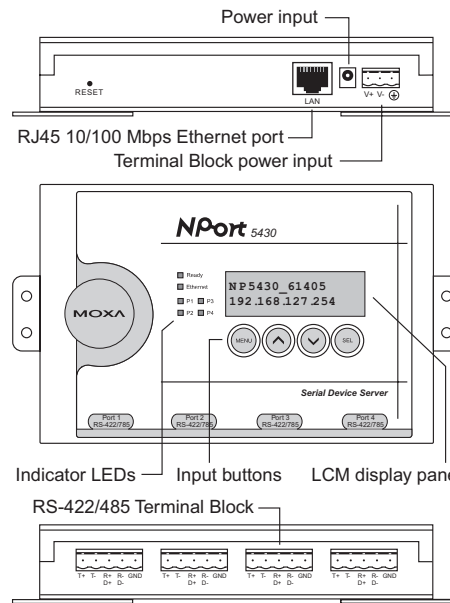

Reset Button—Press the *Reset button* continuously for 5 sec to load *factory defaults*: Use a pointed object, such as a straightened paper clip or toothpick, to press the reset button. This will cause the Ready LED to blink on and off. The factory defaults will be loaded once the Ready LED stops blinking (after about 5 seconds). At this point, you should release the reset button.

LED Indicators—NPort 5400's top panel contains six LED indicators, as described in the following table.

LED Name	LED Color	LED Function
Ready	red	Steady on: Power is on and NPort is booting up. Blinking: Indicates an IP conflict, or DHCP or BOOTP server did not respond properly.
	green	Steady on: Power is on and NPort is functioning normally. Blinking: The NPort has been located by NPort Administrator's Location function.
	off	Power is off, or power error condition exists.
Link	orange	10 Mbps Ethernet connection.
	green	100 Mbps Ethernet connection.
	off	Ethernet cable is disconnected, or has a short.
P1, P2, P3, P4	orange	Serial port is receiving data.
	green	Serial port is transmitting data.
	off	No data is being transmitted or received through the serial port.

LCM Display Panel—When the NPort 5400 unit is powered up, you will see a display similar to:

N	P	5	4	1	0	6	1	4	0	5				
1	9	2	.	1	6	8	.	1	2	7	.	2	5	4

This is where NP5410_61405 is the server's name, and 192.168.127.254 is the server's IP address.

LCM Panel Operation—There are four buttons on NPort 5400's top panel used to operate the server's LCM panel. Going from left to right, the buttons are:

Button	Action
MENU	Activates the main menu, or returns to a lower level.
▲	Scrolls up through a list of items shown on the LCM panel's second line.
▼	Scrolls down through a list of items shown on the LCM panel's second line.
SEL	Selects the option listed on the LCM panel's second line.

Detailed LCM Panel Operating instructions can be found on the CD-ROM in the "NPort 5400 Series User's Manual."

P/N: 1802054000300

4. Hardware Installation Procedure

STEP 1: After removing NPort 5400 from the box, the first thing you should do is attach the power adaptor.

STEP 2: Connect NPort 5400 to a network. Use a standard straight-through Ethernet cable to connect to a Hub or Switch. When setting up or testing NPort 5400, you might find it convenient to connect directly to your computer's Ethernet port. In this case, use a cross-over Ethernet cable.


STEP 3: Connect NPort 5400's serial port to a serial device.

STEP 4: Placement Options

Wall or Cabinet Mounting

The NPort 5400 comes with two metal attachment plates for attaching the embedded computer to a wall or the inside of a cabinet. First, use two screws per bracket to attach the brackets to the rear of the 5400. Next, use two screws per bracket to attach the 5400 to a wall or cabinet.


The heads of the screws should be less than 6.0 mm in diameter, and the shafts should be less than 3.5 mm in diameter, as shown by the figure at the right.

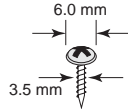


DIN-Rail Mounting

DIN-rail attachments can be purchased separately to attach the product to a DIN-rail. When snapping the attachments to the DIN-rail, make sure that the stiff metal springs are at the top.

Wall Mount

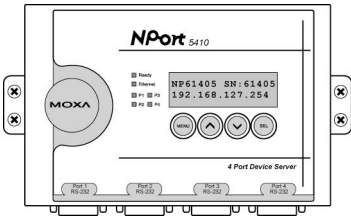


DIN-Rail

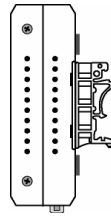

5. Pull High/low Resistors Setting for the RS-485 Port

DIP switches on the bottom of NPort 5400 are used to set the pull high/low resistor values for each serial port.

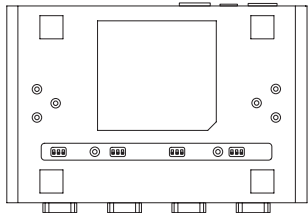

Pull High/low Resistors for the RS-485 Port

SW	1	2	3
	Pull High	Pull Low	Terminator
ON	1KΩ	1KΩ	1KΩ
OFF	150KΩ	150KΩ	---

Default

6. Software Installation Information

To install **NPort Administration Suite**, insert the **NPort Document & Software CD** into your computer's CD-ROM drive. Once the **NPort Installation CD** window opens, click on the Installation button, and then follow the instructions on the screen.


To view detailed information about **NPort Administration Suite**, click on the **Documents** button, and then select "NPort 5400 Series User's Manual" to open the pdf version of this user's guide.

7. Pin Assignments and Cable Wiring

DB9 Male Port Pinouts

Pin assignments apply to NPort 5410 (RS-232 only), 5450, and 5450I.


DB9 Male

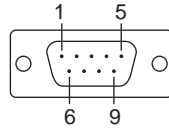


Pin	RS-232	RS-422/ 4-wire RS-485	2-wire RS-485
1	DCD	TxD-(A)	---
2	RxD	TxD+(B)	---
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	---	---
7	RTS	---	---
8	CTS	---	---
9	---	---	---

RS-232 Wiring


DB9 Female to DB9 Male

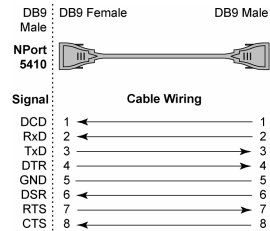

DB9 Female to DB25 Male

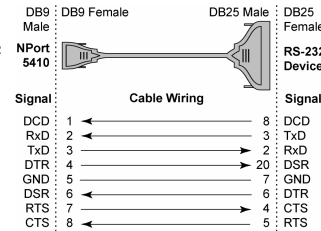

8. Terminal Block Wiring—NPort 5430/5430I

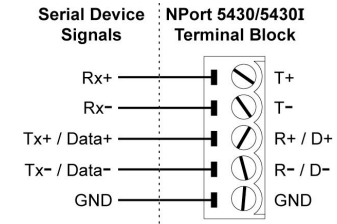

9. Environmental Specifications

Power requirements

NPort 5410	12 to 48 VDC, 350 mA at 12V (max.)
NPort 5430	12 to 48 VDC, 360 mA at 12V (max.)
NPort 5430I	12 to 48 VDC, 585 mA at 12V (max)
NPort 5450	350 mA at 12V (max)
NPort 5450I	554 mA at 12V (max)

(must use Class 2 or LPS power supply)

Operating temp. 0 to 55°C (32 to 131°F)

Operating humidity 5 to 95% RH

Dimensions (W×D×H) 158 × 33 × 103 mm
6.22 × 1.3 × 4.06 inch

Surge protection 15 KV ESD for serial port

Magnetic isolation 1.5 KV for Ethernet

Power line protection 4 KV Burst (EFT), EN61000-4-4
2 KV Surge, EN61000-4-5

Regulatory approvals FCC Class A, CE Class A, UL, CUL, TÜV

ATTENTION

There is a risk of explosion if the real-time clock battery is replaced with the incorrect battery type!

Copyright © 2007
Moxa Technologies Co., Ltd.
All rights reserved.

Reproduction without permission is prohibited.

MOXA

Tel: +886-2-8919-1230 www.moxa.com
Fax: +886-2-8919-1231 support@moxa.com